


# **XD3PR/FL**





# **KammBar**

## **Instructions**

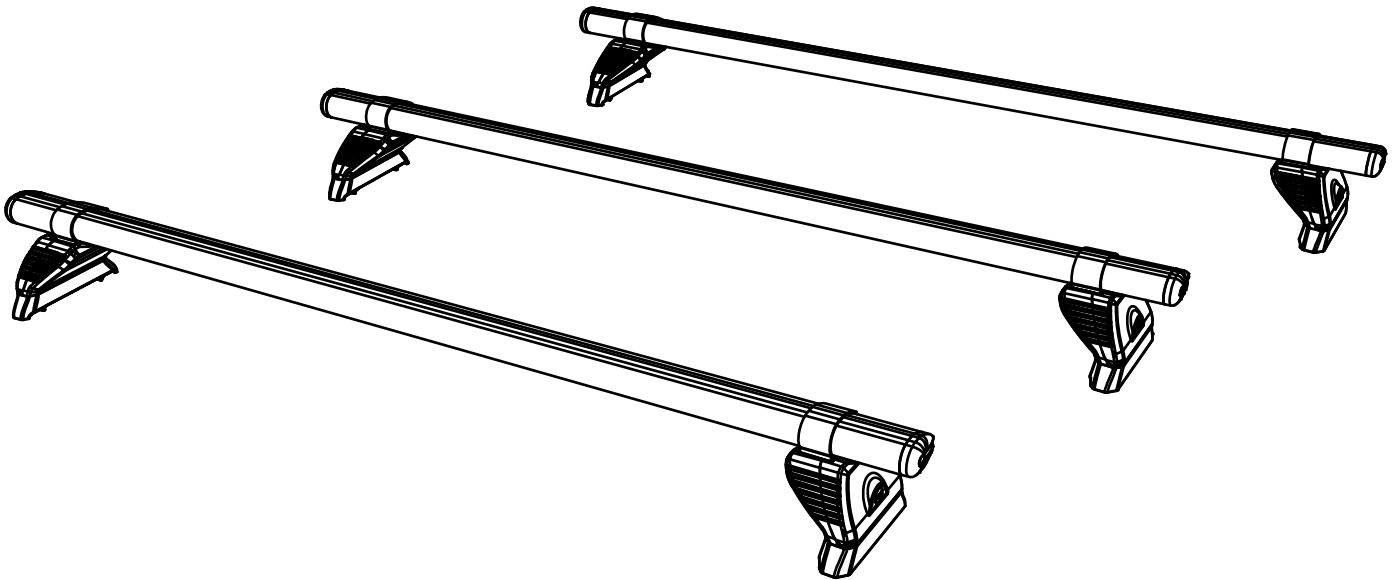


**CITY CRASH** (✓)


According to ISO/ PAS 11154:2006

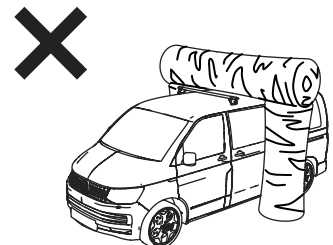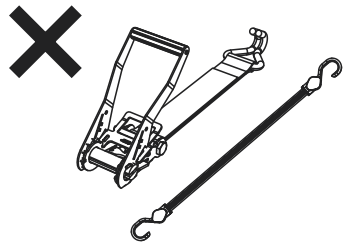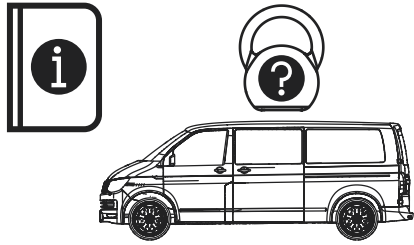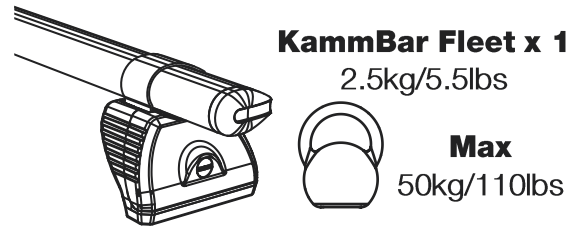


### KammBar Pro






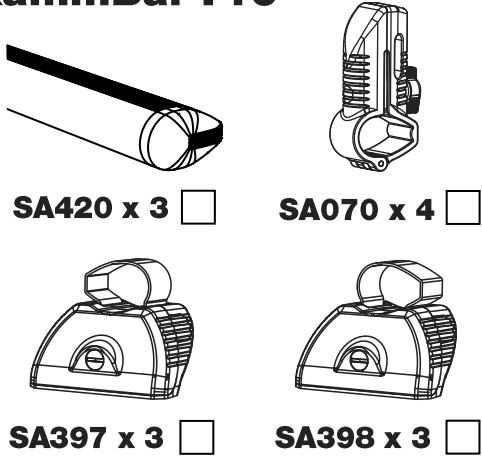


### KammBar Fleet

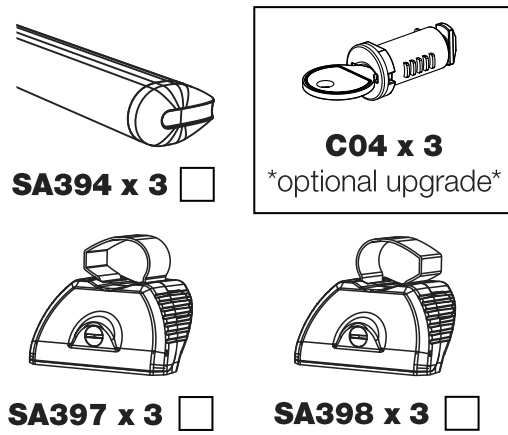


### Fitting Kit

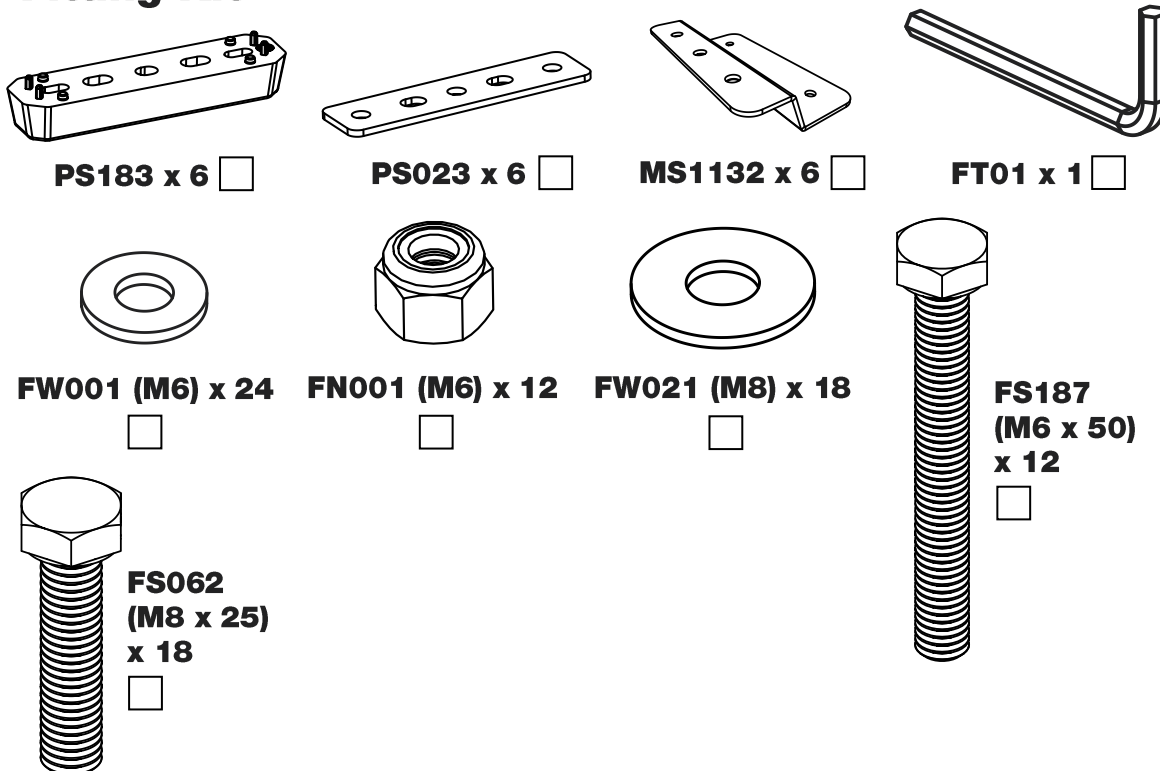


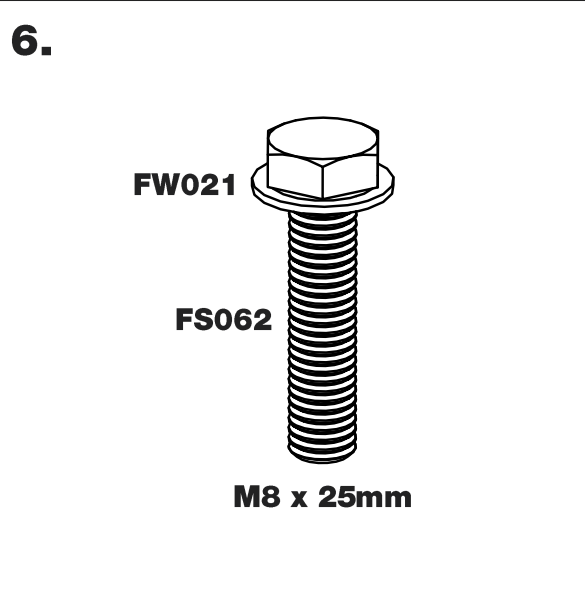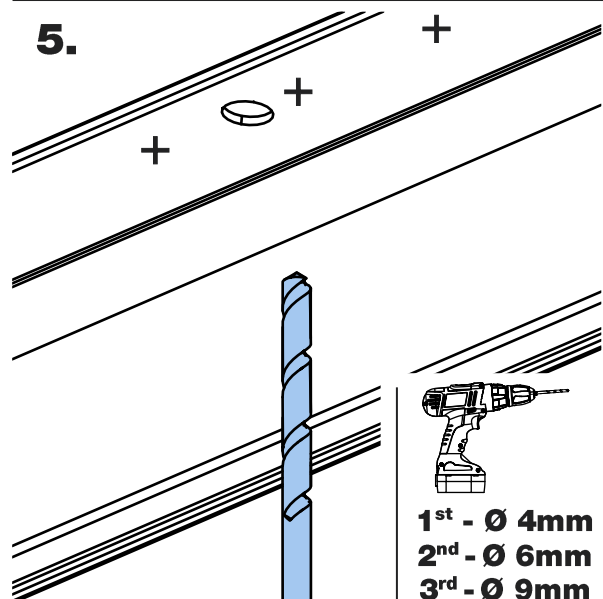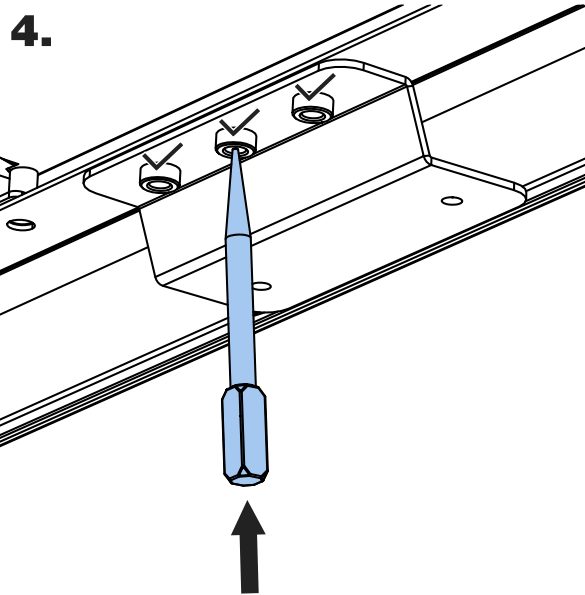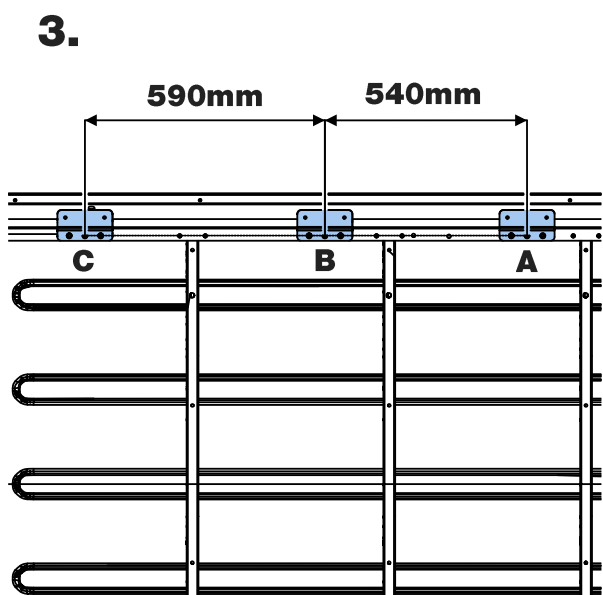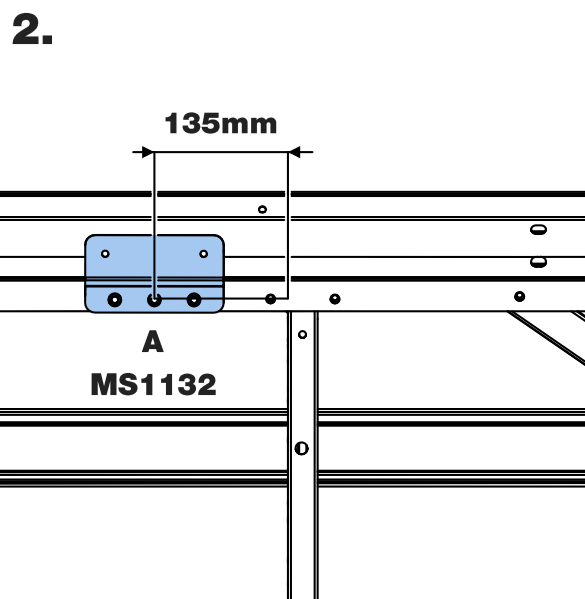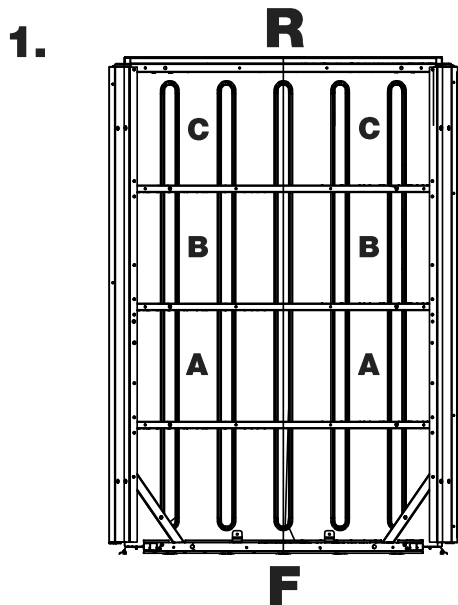


7.

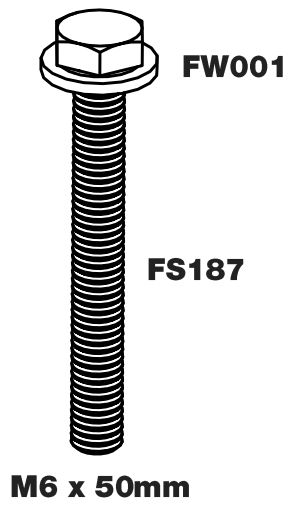


8.

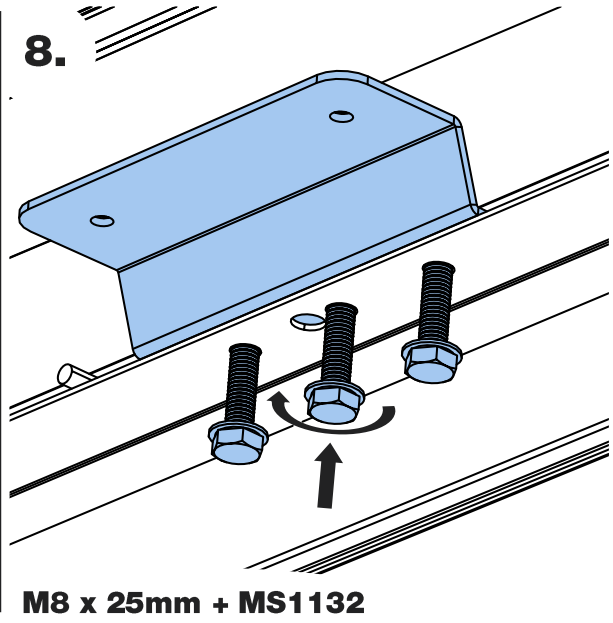


9.

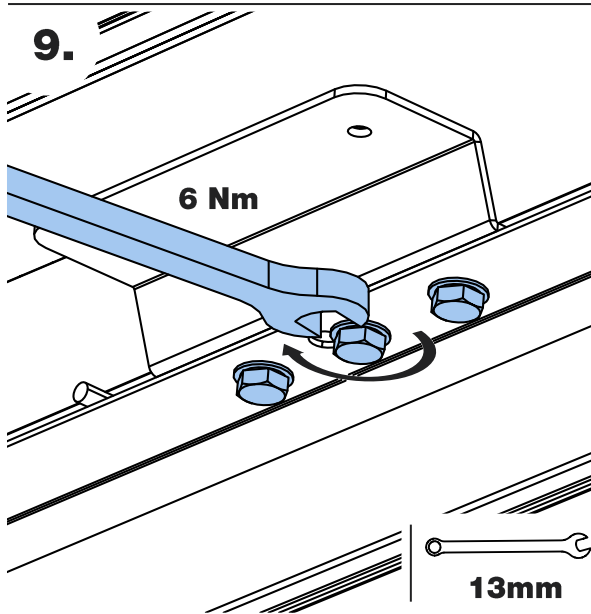


10.

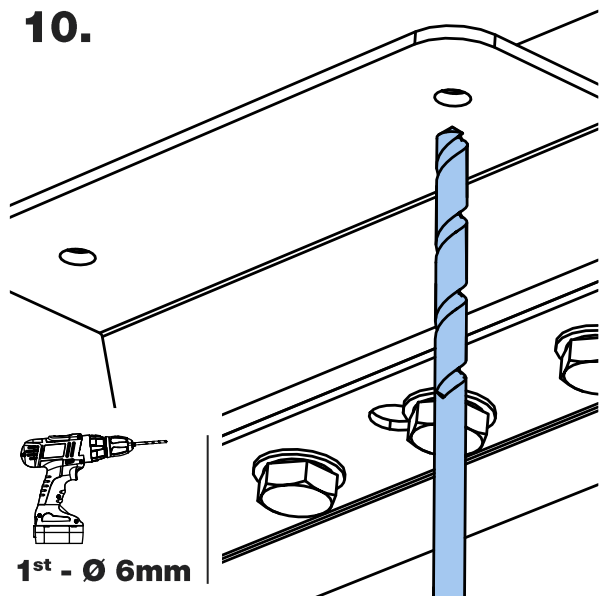


11.

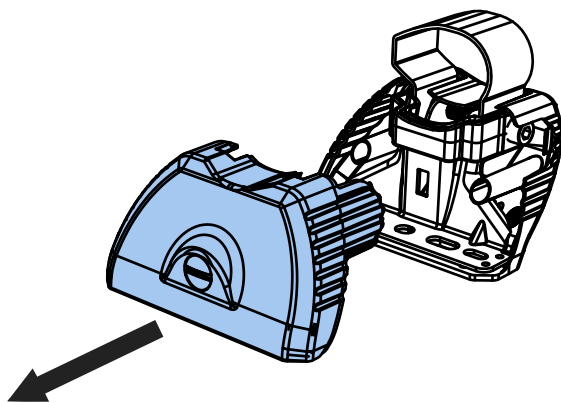


12.

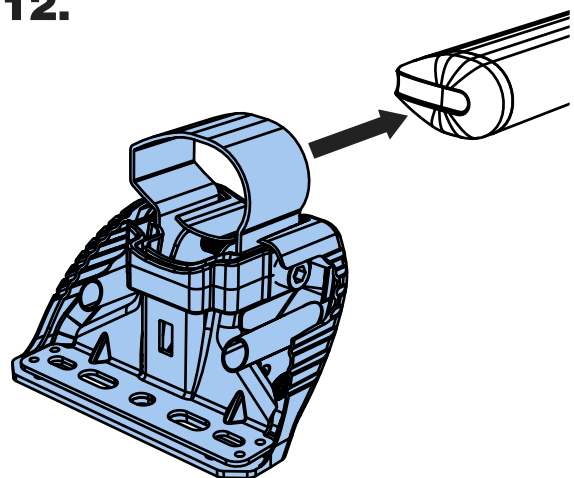


13.




SA397  
PS183




SA397  
PS183




SA397  
PS183

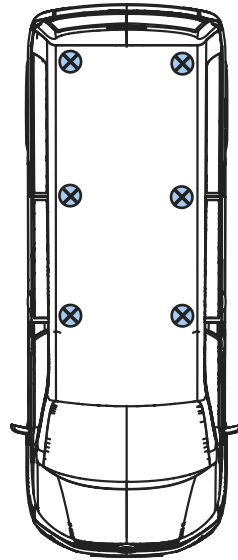


SA398  
PS183




SA398  
PS183




SA398  
PS183




14.

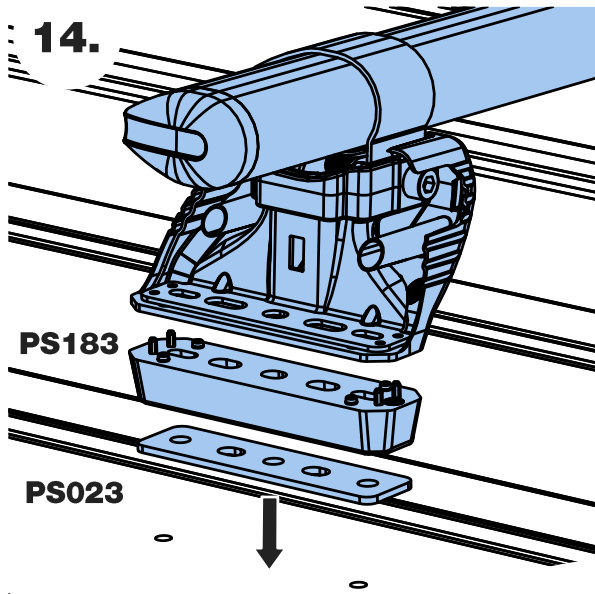


15.

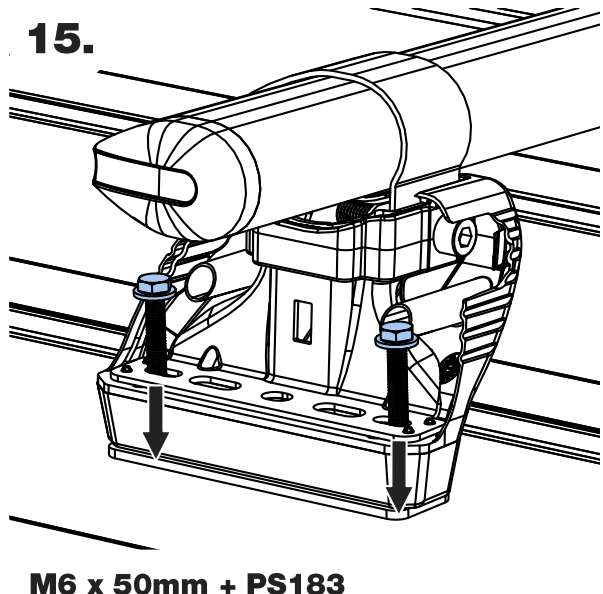


16.

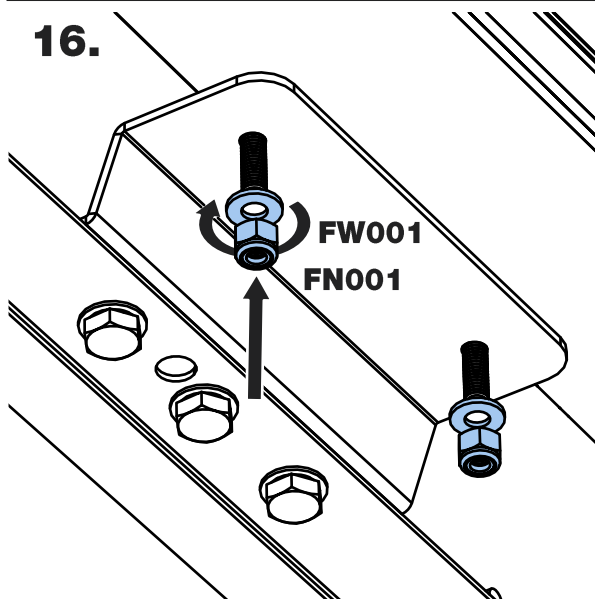


17.

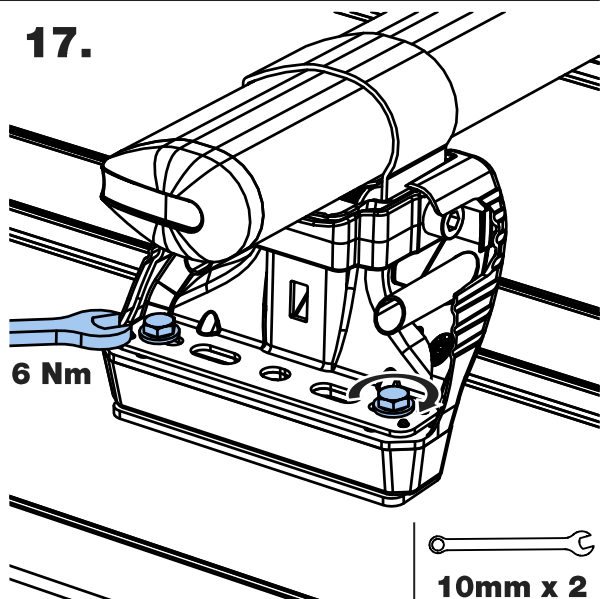


18.

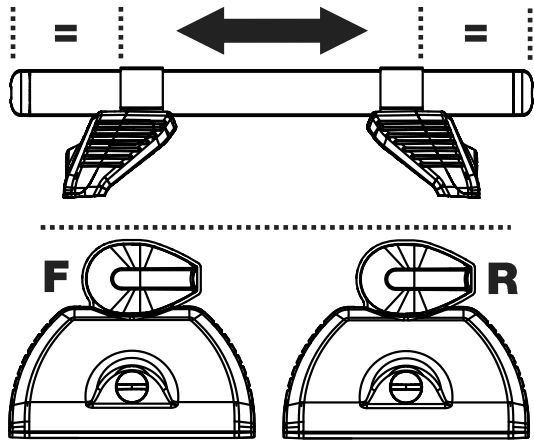

19.

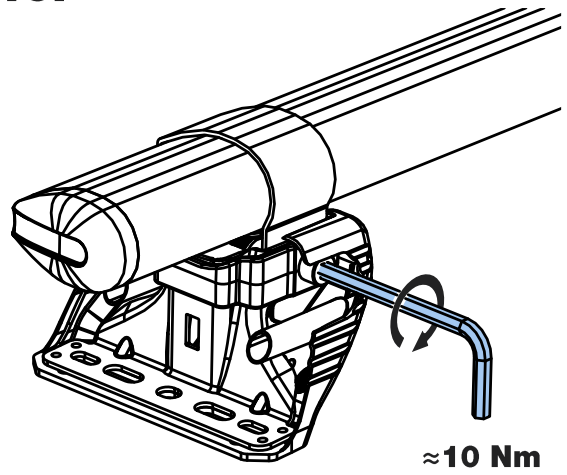

20.

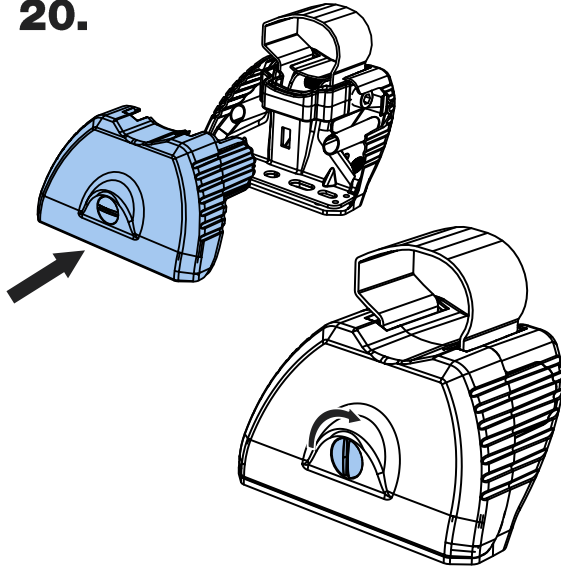

21.

